

How to connect a laptop to the video projector in Sanger 1-038



The laptop connection panel is concealed by a black rectangular cover.

The black cover closest to the room entrance door conceals connections for Table Laptop 1 and Table Laptop 2.



The black cover closest to the projection screen and control panel conceals the connections for Table Laptop 3 and Table Laptop 4.

Press on the top of the cover, listen for a click and then release it.



The cover will raise to reveal the VGA and AC power connections.



The panel will look like this when open.



Take the VGA cable coming from your laptop and attach it to the LAPTOP 1 connector.



AC power is located to the right of the VGA connector.



Walk toward the projection screen, and look to your right for a control panel.



Touch the center LCD screen to power up the panel. Touch the System Start button.



Press the Table Laptop 1 button, the screen will lower and the projector will power up.



If you use a laptop at the other end of the table, remember to select Table Laptop 3, or 4 on the control panel.

When your meeting has ended please press the Exit System button, and then press the Shutdown System button.

